


Replacement parts

Figure 35-1:
XTR humidifier replacement parts

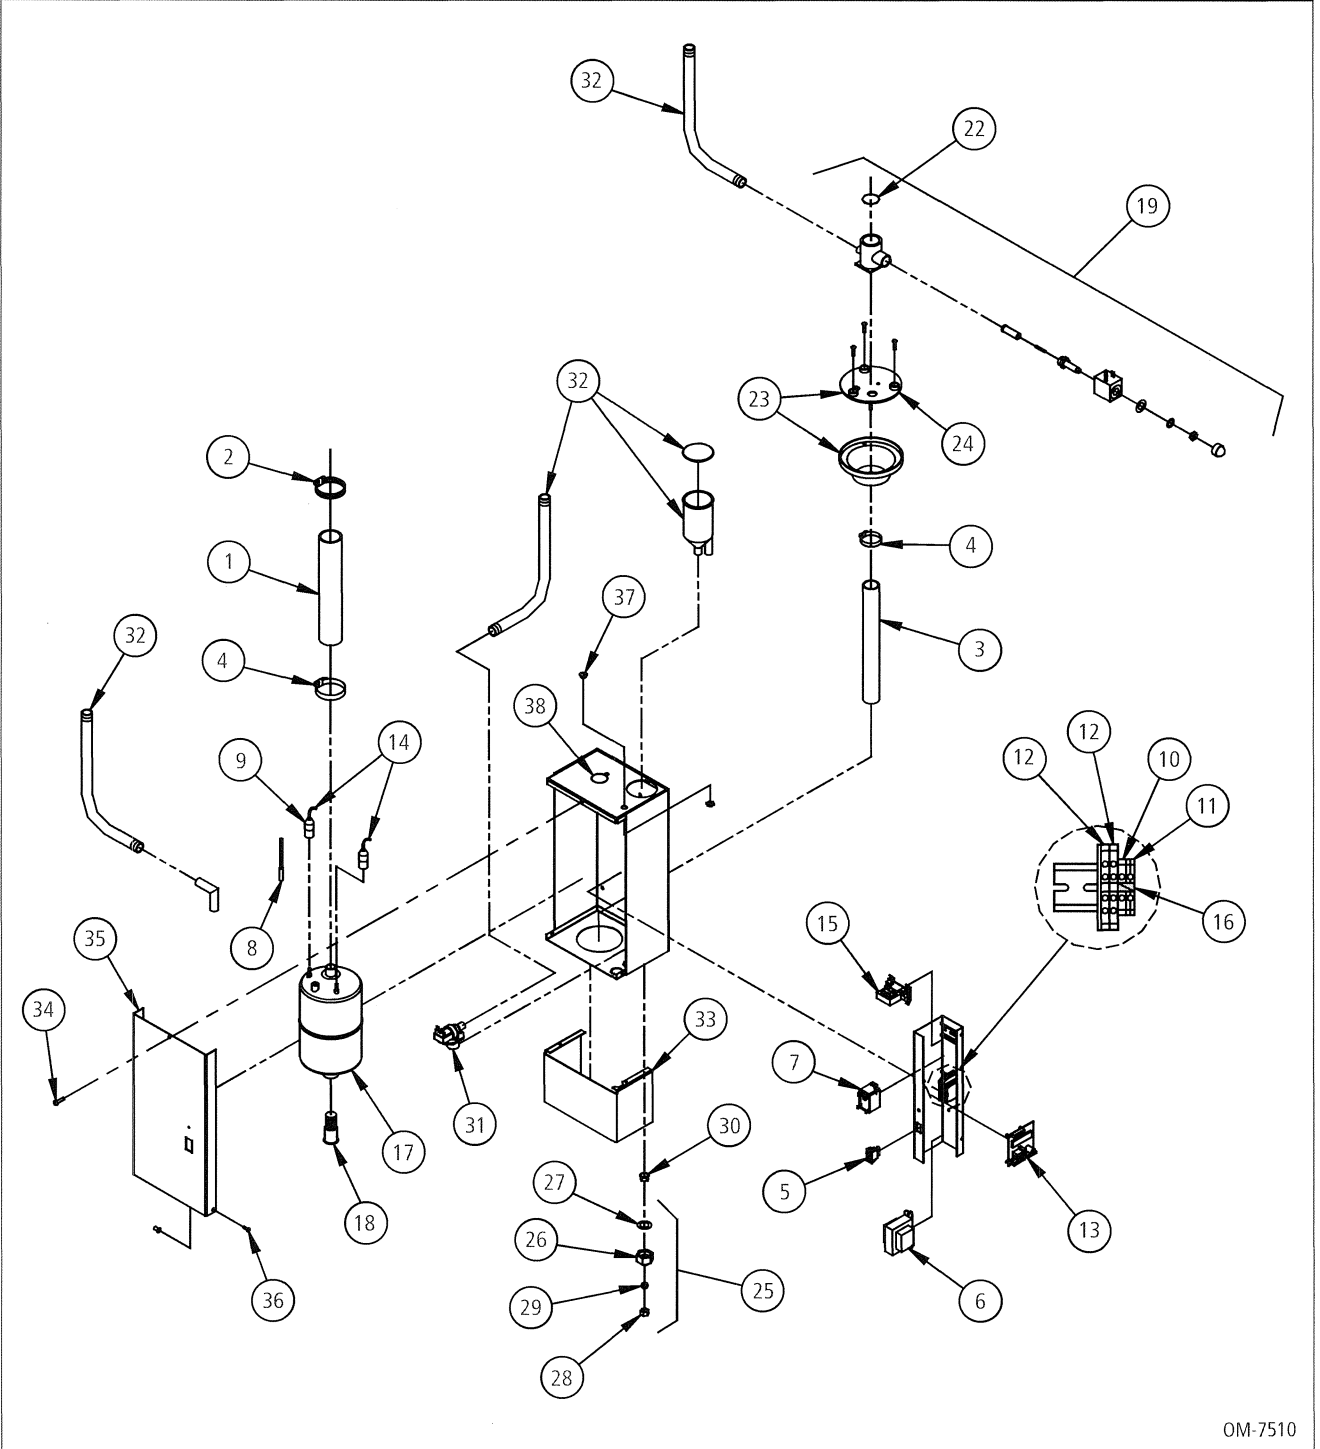


OM-7510

Replacement parts

Table 36-1: XTR humidifier replacement parts					
No.	Description	Part no.	No.	Description	Part no.
	Hoses, adaptors, and clamps			Inlet	
1	Hose, steam 22/29 mm	530002	25	Fill adapter assembly, 3/8" XT unit	180994-038
2	Hose clamp, steam hose to XTR dispersion	700560-075	26	Fill adapter, 3/8" O.D. tubing	530001-002
3	Hose, drain 22/29 mm × 10.00	530005-010	27	Washer, 5/8" hose	530001-003
4	Hose clamp D29, drain cup and steam cylinder to steam hose	530001-051	28	Compression nut, 3/8"	530001-006
	Electrical		29	Compression sleeve, 3/8"	530001-008
5	Switch, main on-off-drain	530010-049	30	Strainer, inlet valve	530001-004
6	Transformer	408965-002	31	Valve, inlet XTR	530001-065
7	Power relay	530010-052	32	Fill cup, XTR	530010-063
8	Plug, max. water level sensor	530010-005		Exterior	
9	Plug, electrode	530010-006	33	Skirt, XTR bottom	530001-062
10	Terminal	530010-010	34	Door fastener	530001-054
11	Ground terminal	530010-013	35	Door, XTR	530001-056
12	Terminal, double (L1/N)	530010-048	36	Door fixation, screws	530012-008
13	Board, PCB	530010-035	37	Cover, XTR top electrical screw	530012-009
14	Wiring kit	530010-050	38	Cap, XTRB mount hole	530012-010
15	Transformer, current sensing XTR	530010-047			
16	Jumper, terminal	530010-051			
	Steam cylinders				
17	Steam cylinder	530011-001			
18	Strainer, steam cylinder	530001-047			
	Drain				
19	Drain valve assembly, 24 V, with grounding kit*	192060			
22	O-ring, drain valve body	530001-044			
23	Drain cup with screws	530001-045			
24	Drain cup plate	530001-046			

* Grounding kit not shown in drawing

Replacement parts

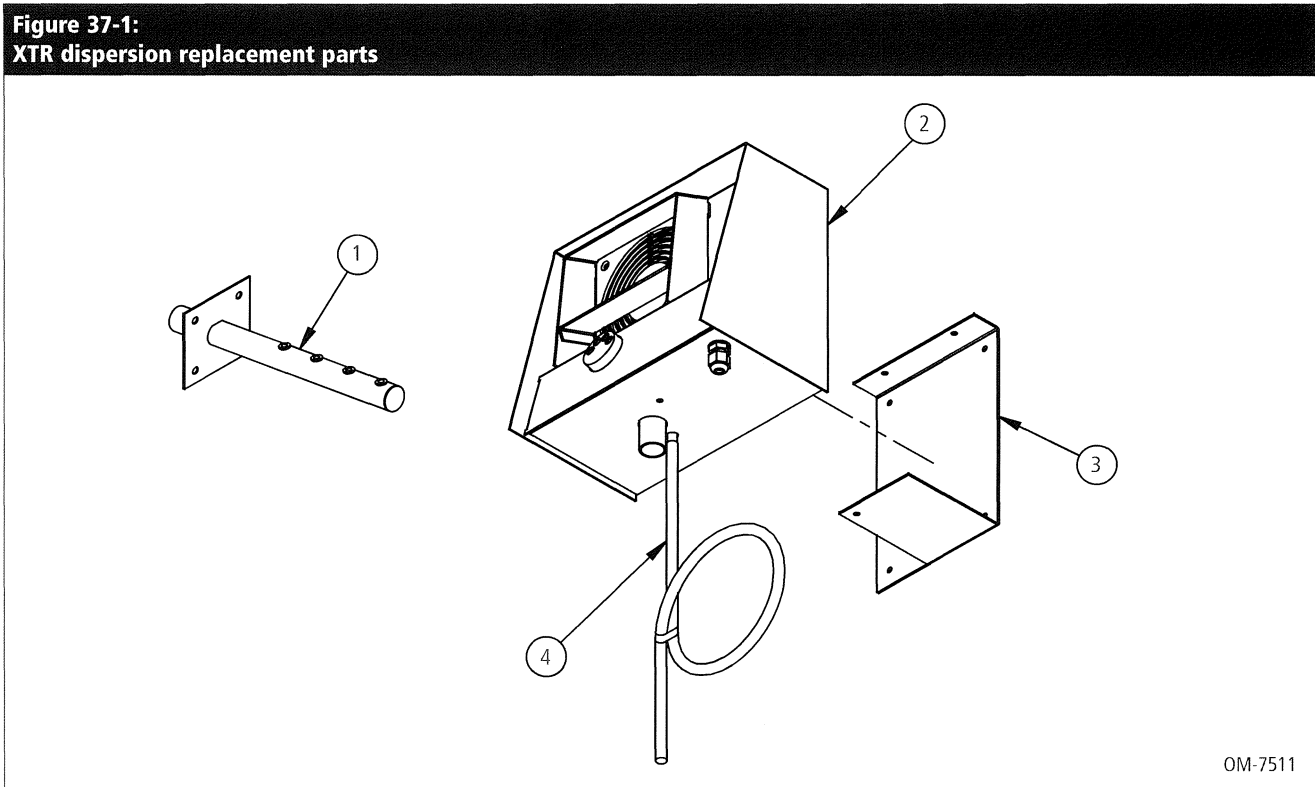

**Table 37-1:
XTR dispersion replacement parts**

No.	Description	Part no.
1	Dispersion, XTR assembly	162728-001
2	DRI-STEEM Model XTRB steam blower	412016-101
3	Bracket, XTRB Remote Blower Mount	530001-061
4	Hose, condensate 6/10 mm	530004